

Hardware Overview



Front Panel

Aux Power Output

4 Available Slots for Optional Smart Modules



Rear Panel

What's in the Box

- CS-3440 CueServer 3 Flex Processor
- (2x) 2-Position Removable Terminal Block
- DIN-Rail Bracket Kit
- Mounting Flange Kit
- Self-Adhesive Non-Skid Protective Feet

Startup Procedure



• Connect CueServer to the Network

Use an Ethernet patch cable to connect CueServer to your Ethernet Switch or directly to your computer.



• Connect CueServer to Power

If your network provides Power-over-Ethernet (PoE), then it will power up. Otherwise, an external power supply (not included) needs to be attached to the "Power Input" terminals.



• Open CueServer Studio on your Computer

You can download CueServer Studio from cueserver.com.



• CueServer should appear in the Navigator Window

CueServer Studio's main Navigator Window searches for and displays all CueServers found on the network.

What's Next

• Visit our Website for More

Our website contains more information, including User's Manual, Downloads, Guides, Examples, Training and more. You can start your CueServer journey at:

cueserver.com

Interactive Technologies, Inc.

5295 Lake Pointe Center Drive
Cumming, GA 30041 USA
1-678-455-9019
interactive-online.com

Specifications subject to change without notice. Interactive Technologies is not responsible for errors or omissions. All trademarks are the property of their respective owners. Copyright © 2022-23, Interactive Technologies, Inc. All rights reserved worldwide.

Distributor:
 Techni-Lux
Phone: 407-857-8770
Fax: 407-857-8771
Email: sales@techni-lux.com
www.techni-lux.com